



# [Interchange with Hansen 600 & 700 Series] **O60 & A70 Series**

## Type:


One Way Shut-Off

## Working Pressure:

300 PSIG

## Operation:

Manual - socket sleeve must be retracted to connect and disconnect

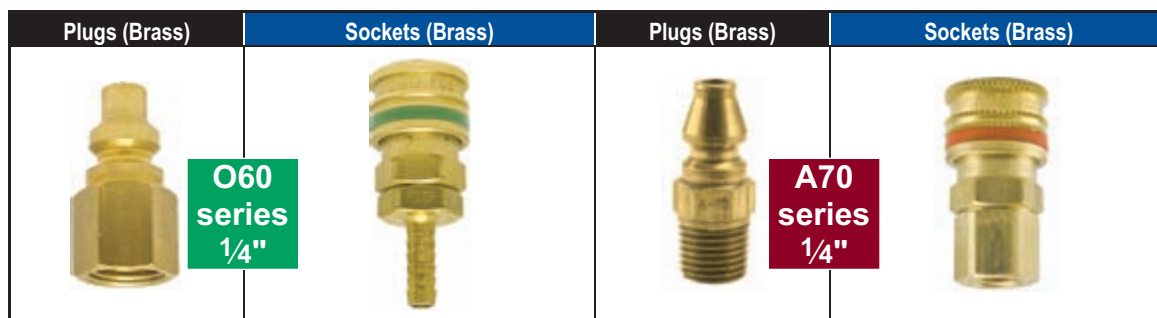

Size	Cat. No.	Hansen No.	Std. Cat. No.	Hansen No.	Ball Lock Cat. No.	Cat. No.	Hansen No.	Std. Cat. No.	Hansen No.	Ball Lock Cat. No.	
Female Thread											
1/8 FPT	—	—	O-2803	GR-600	BLO-2803	—	—	A-2803	RD-700	BLA-2803	
1/4 FPT	O-11	02	O-3003	GR-602	BLO-3003	A-11	A2	A-3003	RD-702	BLA-3003	
3/8 FPT	—	—	O-3203	GR-604	BLO-3203	—	—	A-3203	RD-704	BLA-3203	
Male Thread											
1/8 MPT	O-12	01	O-2903	GR-601	BLO-2903	A-12	A1	A-2903	RD-701	BLA-2903	
1/4 MPT	O-10	03	O-3103	GR-603	BLO-3103	A-10	A3P	A-3103	RD-703	BLA-3103	
3/8 MPT	—	—	O-3303	GR-605	BLO-3303	—	—	A-3303	RD-705	BLA-3303	
Hose Stem (Require Hose Clamps)											
1/4 I.D.	O-16	07	O-3603	GR-606	BLO-3603	A-16	A7	A-3603	RD-706	BLA-3603	
5/16 I.D.	—	—	O-3653	GR-607	BLO-3653	—	—	A-3653	RD-707	BLA-3653	
3/8 I.D.	O-17	09	O-3703	GR-608	BLO-3703	A-17	A9	A-3703	RD-708	BLA-3703	
Push-On Hose Stem											
1/4 I.D.	—	—	O-1513	GR-606P	BLO-1513	—	—	A-1513	RD-706P	BLA-1513	
3/8 I.D.	—	—	O-1713	GR-608P	BLO-1713	—	—	A-1713	RD-708P	BLA-1713	
Reusable Hose Clamp ID x OD											
1/4 x 1/2	—	—	O-SB3	GR-6-OB3	BLO-SB3	—	—	A-SB3	RD-7-OB3	BLA-SB3	
1/4 x 9/16			O-SB5	GR-6-OB5	—			A-SB5	RD-7-OB5	—	
1/4 x 5/8			O-SB7	GR-6-OB7				A-SB7	RD-7-OB7		
1/4 x 11/16			O-SB9	GR-6-OB9				A-SB9	RD-7-OB9		
5/16 x 9/16	—	—	O-SC5	GR-6-OC5	—	—	—	A-SC5	RD-7-OC5	—	
5/16 x 5/8			O-SC7	GR-6-OC7				A-SC7	RD-7-OC7		
3/8 x 5/8			—	—	O-SD7	GR-6-OD7	—	—	—	A-SD7	RD-7-OD7
3/8 x 11/16	O-SD9	GR-6-OD9			BLO-SD9	A-SD9	RD-7-OD9				
3/8 x 3/4	O-SD11	GR-6-OD11			—	A-SD11	RD-7-OD11			—	
3/8 x 13/16	O-SD13	GR-6-OD13				A-SD13	RD-7-OD13				

## COLOR CODED SOCKETS

**O60 – GREEN SLEEVE BAND • OXYGEN SERVICE**

**A70 – RED SLEEVE BAND • ACETYLENE SERVICE**

*When used for oxygen/acetylene service, order with BL to comply with OSHA Std. 1915.55(f)(5).*

**Options:** BL – Locks manual socket against accidental disconnect. To connect, align ball with slot. After connection, rotate sleeve to lock. To disconnect, realign ball with slot and retract sleeve. **To order, prefix BL to socket catalog number.**

- Profile drawings available at [www.couplers.com](http://www.couplers.com)
- See Page 69 for Specifications, Performance Data, Full Size Templates
- See Page 68 for Optional Seal Compounds